Android Bluetooth Terminal Software Guide

1. Execute the software

Iconnect BT	Terminal Ph	one							not o	connected
Nepe	Add.CB4	E Add	LE/CR							
INCLINE	ADD CRI	r 🕘 Mülü	LF/CK							
5	Send		Clea	r						
CR	LF	Ta	ь	ESC						
-										
Jear Log	HEX									
	\sim						3			
2_3						14	\sim	3:0		12

2. Click the icon on the below of the window and the menu display.

Uconnect BT Terminal Phone		not connected
None Add CR/LF	Add LF/CB	
send	Clear	
CR LF	Tab ESC	
Clear Log HEX		
	2. The menu displa	у
	 Connect 	
	File Manager	
	ck the lean	
1. On		
Co	nnect Disconnect File	e Manager
	• ± c)	⊠ 3:23 % ♥ 🗎

3. Connect the RS-232 adapter or scan other Bluetooth devices.

in the second second						
• Norie	Add CR/LF	Add LF/CR				
Se	end	Cie	ar			
CR	LF	Tab	ESC			
dana tan	LIEV					
clear Log						
	select a c	device to coni	nect			
	Paired Devi	ces				
	Serial Ad 00:18:DB	aptor :00:D3:BA				
			Scan for	devices	-	
			Scan for	devices		
			Scan for	devices		
			Scan for	devices		
			Scan for	devices		
			Scan for	devices		
			Scan for	devices		
			Scan for	devices		
			Scan for	devices		
			Scan for	devices		
			Scan for	devices		
			Scan for	devices		
			Scan for	devices		
			Scan for	devices		
			Scan for	devices		
			Scan for	devices		
			Scan for	devices		

4. Connect Ok. The connected information display.



5. Send the data from Android device to the remote device with RS-232. Touch the block and the soft keyboard display.

1	THUR BU	FILOILE				-	_	_	CONTRE		ST HUSDOUT
	_										
• None •	Add CF	VLF	Add LF.	/CR							
Sen	d	-		Clear							
CR	LF		Tab		ESC						
Clear Log	HEX										
) >>											
q	w	e		r	t	у	, ,	u	i	0	р
	Γ.		d	L e	Т		h	:	L L		
a	1	`	u	L'	1	5		1	L N	Ľ.	
仓	2	z	x	c		v	b	n	m		
?123	?123 ,									+	1
\sim 2							es ÷	14 ch 1	M 3:	31	* ₩ 🗎

6. The user can add the code behind the text and then send together to remote Bluetooth device.

Uconnect BT Ter	minal Phone	2					connect	ted:Serial Adaptor
test								
None (1)	Add CR/LF (Add LF/C	R					
Send			Clear					
0	15	Tab	PS(-				
-		100		-				
Clear Log	HEX							
test	rest	best	tes	ting	teste	d tha	at tex	kt tes 🔊
q۱	N	e r		t	y ı	u	i (o p
a	s	d	f	g	h	j	k	1
仓	z	x	с	v	b	n	m	
2123						T	T	L L
. 125		′ L				·		
\sim \leq	\sim 1		Ħ		± ÷ ±	± 🖒 🖬	13:3	3371

7. Receive the data from the remote device to Android device in ASC II format

Uconnect BT Te	rminal I	Phone											c	onnect	ed Ser	al Adaptor
test																
None (*)	Add CR	VLF	Ad	d LF/C	R											
Sen	4				filear											
Jein				_	crear	_										
CR	LF	10	1	ſab	1	ESC	-									
Clear Log	HEX															
est from PC term	sinal jijh	hh														
test	res	st	b	est	t	es	tin	g	tes	te	d	tha	at	tex	t	te: 🔊
q	w	(•	r		1	t	3	/	ι	r	i	i	c	,	р
_	Π.															
a	5	5	C	1	1	F	1	g	ŀ	١	_	j	ŀ	C		
仓	7	2	,			:	,	v	k	,	-	n	n	n		Ø
_	-		-	r l	-	-	-	-	-	_	-	_	-			_
?123			,				-	_							+	ſ
\sim	\sim	Ċ	יר	FF	H			ę	20 -	t ti	t ci	M	З	:3	Ч	\$ ¥ 🗎

8. Check the "HEX" option, the received data from the remote device to Android device will be in HEX format

Uconnect BT Termin	al Phone						conne	cted Ser	1al Adaptor
test									
None Add	CR/LF	• Add LF	CR						
Send			Gear						
CR	LF	Tab	ES	c					
Clear Log 🗸 HĐ									
x74 0x65 0x73 0x74 0	0x20 0x6	6 0x72 0x6	f 0x6d 0x20 0	x50 0x43 0x2	0				
test re	ect	hes	t tos	ting	tosta	ad th	at te	vt	to
Lest it	1	Des		ung	leste	u ui		· · ·	IC.
q w		e	r	t	y	u	i	0	р
a	5	d	f	σ	h	l i	k		
"	3	u	<u> </u>	5		1	~		
û	z	x	c	v	b	n	m		
?123	Г	,						+	۲.
					-A-	14 10 15		2	

Save the log data into the file in the memory
 The default folder which the log file saved automatically
 is ./mnt/sdcard/ucbtadapter/.

The naming convention is the date and serial number.

test from	test from PC terminal											
jjjhhhtes ooupouip	jjjhhhtest from PC ugyuyuyhiuouoioikpopkopopopkpojiojijoijojjo; ooupouipuphuhhuygtftrdytrdudrutdygiuo;ipipk'p0											
:	>>											
q	w	-	e	r	t	y	u	i	o p			
a	1	s	d	f	g	h	j	k	I			
仓		z	x	с	v	b	n	m	Ø			
?1	23		,						Ļ			
\sim	\sim	Ľ				194	te cò i	M 3:4	- 1 % ▼ 🗎			

10 Select the "Disconnect" from setp 2, the Bluetooth will disconnect. The information display.

Uconnect BT Terminal Phon	ie.		not connected
1			
None Add CR/LE	Add LE/CR		
	Augener		
Send	Clear		
CR LF	Tab ESC		
daw los			
Clear Log			
	Device conn	ection was lost	
			N 🖬 3:26 🕯 🖲 🕯

11 Select the "File Manager" from step 2, the file and folder list

display.

Uconnect BT Terminal Phone		_	_	_	_	_
dev/ Type : Folder						
► root/ Type : Folder						
➡ data/ Type : Folder						
default.prop Type : File Size : 118 Date : 1969-12-31						
■ init Type : File Size : 94360 Date : 1969-12-31						
■ init.goldfish.rc Type : File Size : 1997 Date : 1969-12-31						
init.picasso.rc Type : File Size : 5761 Date : 1969-12-31						
■ init.rc Type : File Size : 15556 Date : 1969-12-31						
picasso_postboot.sh Type : File Size : 55 Date : 1969-12-31						
➡proc/ Type : Folder						
■ sbin/ Type : Folder						
■ sys/ Type : Folder						
system/ Type : Folder						
ueventd.goldfish.rc Type : File Size : 221 Date : 1969-12-21						
Ueventd picasso _{Edit}		Send		Del		
	Ħ			<u>t+</u> 🖻 🖬	3:2	∃ * ₹ 🗎

12 Select the (Touch) and Send/Edit/Delete the file

